



Tixolam CD 31

Chemical description

Product based on derivatives of polysaccharides and silicates

Main use

Rheology modifier and binder for ceramic glazes

Typical values

Appearance: Homogeneous powder

pH (2% solution): 8 - 11

Viscosity (2% solution, Brookfield RVT @ 20 °C, 20 rpm): 2500 – 6000 cP

Product properties

TIXOLAM CD 31 has been developed to meet white-ware glazing requirements:

- short grinding time;
- short unloading from the mill and sieving time;
- no settling to avoid glazes sedimentation in tanks and reservoirs;
- long shelf life of glaze-slips;
- high flow capacity of spray guns;
- rheological behaviour suitable for the application on vertical or sloping surfaces, avoiding dropping and straining problems;
- short drying time, compatible with high speed "robot" glazing systems;
- good texture and even surface;
- homogeneous coating of surfaces;
- good binding action avoiding crawling, excessive release of dust, cracks and other defects

TIXOLAM CD 31 gives the glaze slip a proper pseudo-plastic rheological behaviour suitable for spray glazing of ceramics.

Fig.1 shows a moderate thixotropy useful to avoid sedimentation and dropping of the glazes too.

Fig.2 shows the presence of a little yield point that helps to eliminate sedimentation and straining problems.

FIG. 1 - SANITARY-WARE GLAZE - 1.77 kg/l
0.35% TIXOLAM CD 31


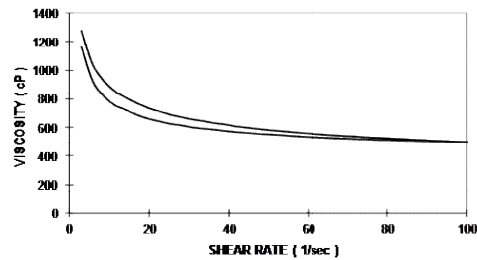


FIG. 2 - SANITARY-WARE GLAZE - 1.77 kg/l
0.35% TIXOLAM CD 31

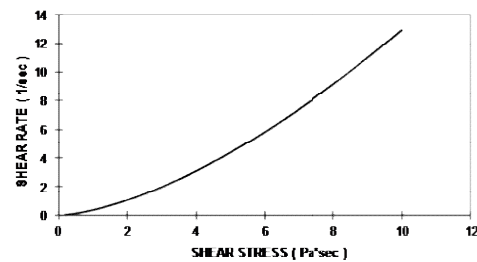

Applications

TIXOLAM CD 31 is usually added into the glaze in quantity of 0.2 - 0.5% (on solids).

The addition of TIXOLAM CD 31 can be done in different ways according to glaze feature, plant organisation and habits:

- Total or partial addition in powder form directly into the ball mill. To reduce grinding time, it is also possible to add TIXOLAM only in the last hour of grinding.
- Addition of TIXOLAM CD 31 into the glaze slip unloaded from the mill is very often done with a predispersed paste composed by 4 - 8 parts of Tixolam CD 31 and 96 - 92 parts of water, obtained through a high speed stirrer (standard mixing time: 5-10 minutes). This paste is then kept at rest for 12-24 hours before addition.

ceramics.lamberti.com

This information and our technical recommendations, if any, both verbal and in writing, are given to the best of our knowledge, without any express or implied warranty, e.g., regarding their fitness for a specific purpose. Each user of our products is the sole responsible for assessing and ensuring compliance with all legal regulations including intellectual property laws and necessary certifications and authorizations with respect to the use, combination and processing of our products. Our technical recommendations do not release the user from the obligation to check its validity and to test our products as to their suitability and fitness for the intended processes and uses. The application, use and processing of both our products and the products manufactured by the user (on the basis of our technical recommendations, if any) are beyond our control and, therefore, the user is the sole responsible for them. Detailed information and instructions on handling the products and cautions to be observed in the use of them are available in our relevant Safety Data Sheet.



The addition to the glaze slip requires a “high speed” stirring, and a time between 20 minutes and 1 hour.

- Addition of TIXOLAM in powder form directly into the glaze which has to be made carefully to get a complete and homogeneous dispersion of the binder without formation of clots.

In any case a partial addition of TIXOLAM CD 31 into the ball mill at the beginning of grinding (dosage around 0,05 % on solids) as grinding aid and as suspending agent is suggested to improve grinding and to avoid quick glaze sedimentation.

Take also into consideration that glaze slips might show thinning or thickening behaviour in the first hours after addition of Tixolam.

Then we recommend a resting time to reach stable rheological parameters of the glaze before its use. The proper resting time depends on local working conditions and has to be checked on site.

TIXOLAM CD 31, due to its chemical composition, can be prone to bacterial attacks that can cause sudden changes of rheological characteristics of the glaze; then we recommend the use of antibacterial agents (i.e Carbosan from Lamberti) during glaze preparation to improve its consistency.

Storage and handling

TIXOLAM CD 31 is stable to prolonged storage under condition where extreme moisture does not occur. The shelf life is at least twelve months if this condition is observed.

Packaging

25 kg five-ply multiwall paper bag having two plies coated with polyethylene.

Material safety

Consult the Safety Data Sheet